



## Flame Arresters

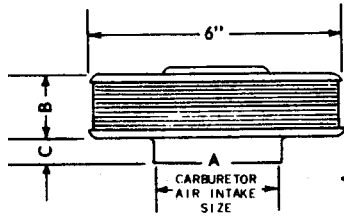


MODEL	A	B	C
2H15	2 5/8	1 1/2	1/2
2H16	3 1/8	1 1/2	1/2
2H17	4 1/4	1 1/2	5/8
2H18	5	1 1/2	5/8
*2H20	5	2 1/2	0

\* SPECIAL FOR FORD AND HOLLEY.  
WIRE MESH ARRESTER SCREEN.


**2H1** Breather Hose Adaptor  
5/8" I.D. Hose

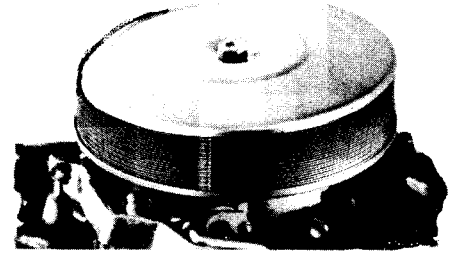


## Carburetor Wedges

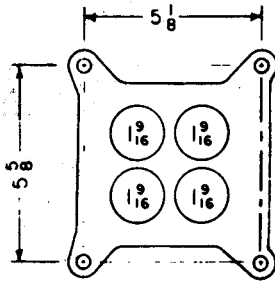

**M648**  
For AFB Carter as used by  
Ford; Holley; Ford/Autolite.

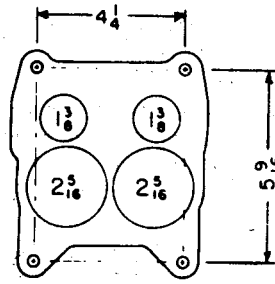

**B650**  
Rochester Quadrajets  
**B651**  
For Flywheel Forward  
Engine Installations

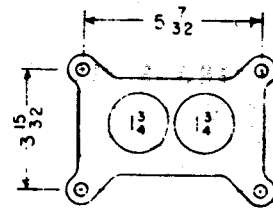

**V649**  
ABD Carter; Holley  
Ford/Autolite; Chrysler

\*approximately 8°

OEM Replacement for: **Chris Craft**

### INTAKE MANIFOLD

Aluminum



SIDE VIEW



Flywheel Forward, Low Profile

TOP VIEW



- 827-1621-CC** Aluminum intake manifold. Exact replacement for the low profile intake used on GM small block V8 flywheel forward engines marinized by Chris Craft.